

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING USER INSTRUCTIONS FOR THE SONIC FACIAL BRUSH

1. Close supervision is required when this product is used on, by or near children or people with certain disabilities.
2. Use product only for its intended use as described in this instruction booklet. Do not use attachments not recommended by the manufacturer.
3. Keep the cord away from heated surfaces.
4. Never use while sleepy or drowsy.
5. Do not use outdoors or where oxygen is being administered.
6. Never operate if the product is damaged.
7. Do not operate the charger if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged or dropped into water.
8. Do not place or store the charging base where it can fall or be pulled into a tub or sink.
9. Do not immerse charging base in water or any other liquid.
10. If charging base falls into water or another liquid, unplug immediately.
11. Use only with Conair supplied power adapter Model CA53.
12. CAN ICES-3(B)

The True Glow Sonic facial brush handle and charger have no serviceable parts. If the charger cord is damaged, it must be unplugged and replaced. Call 1-800-3-CONAIR for instructions or purchase replacement brush heads.

SENSITIVITY AND CAUTIONS SPECIAL CAUTIONS FOR DELICATE AREAS

The True Glow Sonic Facial Brush is a face and body cleansing device that is intended to help you get clean and healthy-looking skin. The True Glow Sonic Facial Brush is not a medical device and is not intended to be used to treat any medical conditions such as acne.

If you are under a doctor's care for any skin condition or if you think you have very sensitive skin, please consult your physician before use.

We recommend starting on the LOW setting and slowly increasing speed depending on how your skin reacts to treatment. If rash or irritation occurs, stop use.

We recommend not sharing the brush heads; each user should have their own brush head.

 
 
 
Do not use with exfoliation creams with rough or jagged particles.

Removing makeup can cause the brush head to discolor. This will not affect performance and the brush head can be used for the entire recommended life of 90 days.

If you experience any pain or discomfort during use, stop using and consult your physician.

Moisten your face and apply cleanser. Also apply a small amount of cleanser to the moistened brush head. Do not apply pressure with the brush to the face; let the sonic oscillation perform the cleansing. When finished, rinse with water and dry skin with a clean towel.

TRUE GLOW SONIC FACIAL BRUSH FEATURES

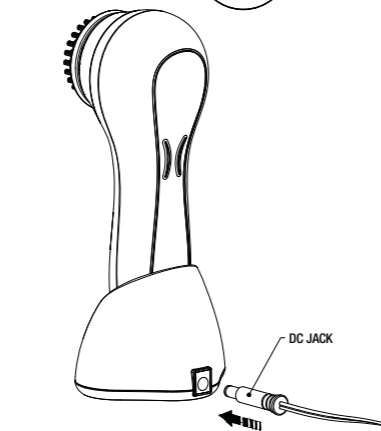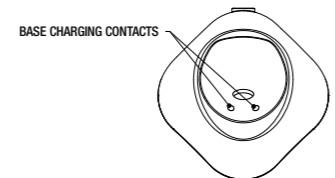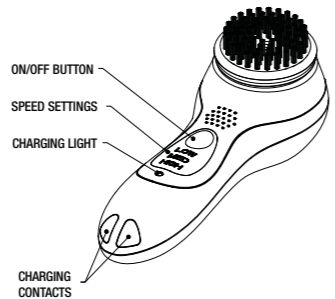

THREE SPEED OPTIONS

The three speeds available on your True Glow Sonic Facial Brush allow you to customize your facial cleaning routine to suit your individual needs.

ATTACHMENTS

NORMAL SKIN: White bristles with a white plastic back.

SENSITIVE SKIN: White bristles with a light grey plastic back.

BODY: Larger brush size with white bristles and darker grey plastic back.

Note: Your True Glow Sonic Facial Brush may only include certain attachments. See retailer for replacement units or call 1-800-472-7606 or visit www.conaircanada.ca

TIMER

Timer allows consistent treatment in each of the 6 facial cleansing zones (see diagram) with a beep after 10 seconds of treatment. The unit also safely shuts off in 60 seconds.

WATERPROOF

The True Glow Sonic Facial Brush is waterproof and can be used in the shower.

RECHARGEABLE

The True Glow Sonic Facial Brush is cordless and requires a full charge before use. After unit is fully charged, it can provide up to 35 minutes of use without recharging.

CHARGING THE SONIC FACIAL BRUSH

1. Before using the sonic facial brush for the first time, it must be fully charged for 16 hours. Plug the power adapter into a wall outlet and plug the DC jack into the back of the charger base. Place the sonic cleaning brush into the base and be sure the red LED lights, indicating that the unit is charging.

2. The charging indicator under the control panel will illuminate RED during charging. Once fully charged, the light will illuminate GREEN. Always check to ensure that the charging light illuminates when you place the sonic facial brush in the charging stand.

3. The RED light will start flashing when the unit reaches low battery capacity during operation.

4. The adapter may become warm while charging; this is normal operation.

5. In order to maintain the optimum capacity of the rechargeable batteries, the sonic facial brush should be given a full 14-hour continuous charge every 3 months.

6. Unplug the adapter from the wall and the base when not in use. Do not unplug the adapter from the wall when it is still connected to the unit. This will cause the battery to discharge

STARTING THE SONIC FACIAL BRUSH AND SELECTING THE SPEEDS

Press the ON/OFF button 1 time for HIGH setting, 2 times for MEDIUM setting and 3 times for LOW setting. The speed setting will illuminate, indicating the setting on the control panel.

AUTOMATIC 6-ZONE CLEANING CYCLE

Once the sonic brush is started, it will beep every 10 seconds to change the position on your face. It will shut off at 60 seconds after completing the cycle. You can change speeds during the cycle by pressing the ON/OFF button until you get to desired setting.

STOPPING THE SONIC FACIAL BRUSH

At any time the sonic brush can be stopped by pressing and holding the ON/OFF button for 1 second.

ATTACHING AND REMOVING YOUR BRUSH HEAD

To attach the brush, hold the brush by the rim and press over mounting post until it firmly snaps into place. To remove, hold the rim and pull off.

6 FACIAL cleaning zones



NOTE: 10 SECONDS AT EACH LOCATION – 1 CYCLE = 60 SECONDS

OPERATING INSTRUCTIONS

1. Wet your face and apply sufficient cleanser. Also apply a small amount of cleanser to the wet brush head.

2. Turn the brush on and select desired speed. We recommend starting on LOW and increasing speed depending on how your skin reacts to treatment.

3. **Do not press the brush hard against your skin as it will reduce the motion and effectiveness.** Keep the brush in light contact and flush against the skin.

4. Move the brush in a slow circular motion around your face. Let the sonic oscillation do the cleansing. **NOTE: Do not apply treatment close to the eyes to avoid risk of injury.**

5. When finished, rinse with water and dry your skin with a towel.

USER MAINTENANCE INSTRUCTIONS

CARING FOR YOUR TRUE GLOW SONIC FACIAL BRUSH

1. After each use, wipe the brush handle with a damp cloth to remove any oils or lotions used during treatment. Be sure you keep the charging contacts on the sonic brush clean to keep the unit charging properly.
2. Once a week unplug the DC jack and clean the charger base to prevent buildup of oils and lotions. The 2 pin contacts must be clean for the unit to charge properly.
3. Clean unit thoroughly each week by rinsing under warm soapy water to help remove oil and lotion buildup, wipe with a dry cloth and store unit in its box or in a clean, dry place.
4. Remove brush heads once a week and rinse under warm soapy water to remove residue accumulated during treatment. Allow brush heads to air dry. Store in a clean, dry place.
5. Do not use abrasive cleaners for cleaning.
6. Do not put unit in dishwasher for cleaning.
7. When storing the brush off the unit, use the protective cover. This will prevent the bristles from deforming.

Note: It is recommended to replace the brush attachments every 90 days, as the bristles wear over time and lose their efficacy.

TROUBLE SHOOTING GUIDE

<p>THE SONIC BRUSH IS NOT CHARGING.</p> <p>NO RED CHARGING LIGHT.</p> <p>THE CHARG NG LIGHT DOES NOT CHANGE TO GREEN.</p>	<ol style="list-style-type: none"> 1. Make sure the contacts on the unit and base are clean. See user-maintenance instructions for cleaning procedure. 2. Make sure the adapter and DC jack are plugged in properly. 3. Check the outlet and make sure the power is on. Most bathroom outlets have a test and reset button. Press the reset button and recheck the outlet.
<p>THE SONIC BRUSH WILL NOT TURN OFF.</p>	<p>You must hold the ON/OFF button for more than 1 second to turn the unit off.</p>
<p>THE BRUSH HEAD VIBRATES OR FALLS OFF DURING USE.</p>	<ol style="list-style-type: none"> 1. Make sure the brush head is snapped on properly. 2. Replace the brush head.



BATTERY DISPOSAL

Contains nickel metal hydride batteries. Must be collected, recycled or disposed of properly. Do not dispose of in the municipal waste.

 
Under various state and local laws, it is illegal to dispose of this battery in the municipal waste stream. The EPA-certified RBRC™ battery recycling seal on the nickel metal hydride (Ni-Mh) battery indicates Conair is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC™ program provides a convenient alternative to placing the used Ni-Mh batteries in the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-8-BATTERY for information on Ni-Mh battery recycling and disposal bans/restrictions in your area. Conair's involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.

RBRC™ is a trademark of the Rechargeable Battery Recycling Corporation.

The batteries are sealed inside the Sonic Facial Brush handle, so they cannot be easily removed for recycling. The entire Sonic Facial Brush handle should be returned when recycling the batteries for this product.

**WARNING:
IF YOU THINK THE
POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

**KEEP AWAY
FROM WATER**

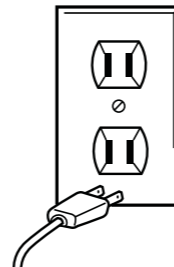

Everyone knows that electricity and water are a dangerous combination. But did you know that an electrical appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

**ALWAYS UNPLUG SMALL
APPLIANCES**

LIMITED ONE YEAR WARRANTY

Conair will repair or replace, at our option, your appliance free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below together with your sales slip and \$7.50 for postage and handling. In the absence of a receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12 MONTH DURATION OF THIS WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

SERVICE CENTRE:

Conair Consumer Products ULC
100 Conair Parkway,
Woodbridge, Ontario, L4H 0L2.
1-800-472-7606
©2014 Conair Consumer Products ULC
www.conaircanada.ca
Consumer Call Centre E-mail :
Consumer_Canada@Conair.com

renew · refresh · revive | renouvelle · rafraîchit · ravive

true glow

Sonic Skincare Solution
Facial Brush



Have a Question?

Please do not return this product to the retailer.

Call Us First!

Our customer service and product experts are ready to answer ALL your questions.

Please call our TOLL-FREE customer service number at: 1-800-472-7606 or visit us online at www.conaircanada.ca

CONAIR

Model TGSFB

13CN146104

IB-12588